




**HARLEY DAVIDSON** | FITS ALL '96+ MODELS EXCEPT 750 STREET

## 1. ADAPT

Clean the surface of your device. Center the iOadapt™ on your device then apply with firm pressure to device or case while on a flat surface and adhere. **Allow adhesive to set at least 8 hours before first use. For best results, let it set overnight.**

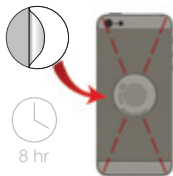

## 2. INSTALL

The Kustom Semisphere Mount bolts to the stock controls. Remove 2 bolts from the controls, line up the mount, and use the included hardware to tighten. Follow factory specs. **Tools Needed:** T27 torx driver



## 3. ATTACH

Once the iOcore is placed on the Semisphere, your device is ready to be firmly attached.



**GETKLOCKED.COM**


## iOmounts™ COMPONENTS



### iOadapt™

The iOadapt™ is a stainless steel disk that attaches to your smartphone, tablet, e-reader or other approved device.

**NOTE:** The iOadapt™ is NOT a magnet!



### iOcore™

The iOcore™ is a magnetic cylinder that connects your devices to the motorcycle mounts, stands, wall mounts, car mounts and other iOmounts™ products once the iOadapt™ is adhered to your device. (Available in many colors.)

## APPLICATION NOTES

- ➔ Each iOadapt™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOadapt™.
- ➔ iOadapts™ supplied with the nomad™ and motorcycle-specific mounts are intended for phones and smaller devices only, and will not support full size tablets, e-readers and larger devices.
- ➔ Do not use on silicon type or heavily textured cases!

**WARNING:** When riding or driving, please follow your state laws regarding device use.